


PM2 Installation Guide

Cutout and use as template for drilling

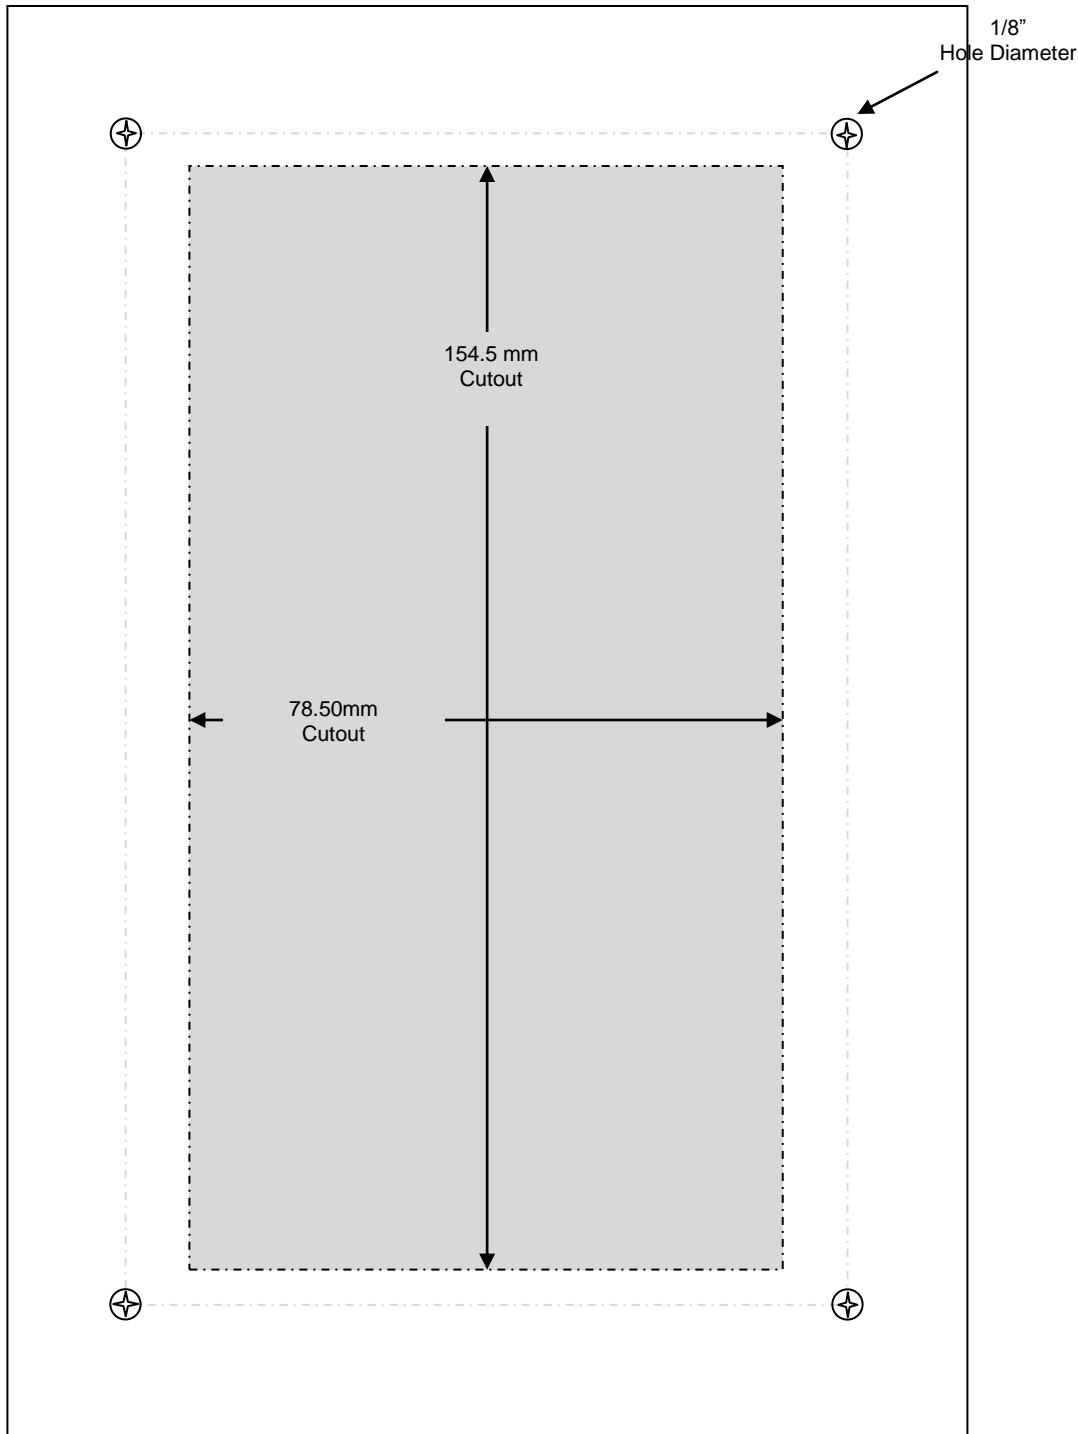

Installation: Find a suitable location making sure there is clearance for the installed depth. Use a hole saw or other suitable device to make a cutout.

Place the unit in the cutout and mark and drill holes for the mounting screws. If the panel is too thin or soft for screws use a stainless screw clips.

Mounting Depth
80mm

