

# RM10 Mounting Instructions

## For DIN style Radios with Sleeve Mount:

Use a utility knife to remove the post mount inserts.

Insert the mounting sleeve and bend the securing tabs to hold the sleeve in place .

Follow the Manufactures directions for mounting and electrical hookups



## For Post style Mount radios:

Leave the inserts in place. Follow the manufactures directions for mounting and electrical hookup.

## Mounting Positions

The Poly Planar RM10 can be mounted on any overhead panel, shelf top or under dash surface that provides a flat surface of sufficient strength to fasten to.

After mounting the radio, use the self-tapping screws, provided, to attach the housing. Make sure the position does not obstruct the operators view or control.

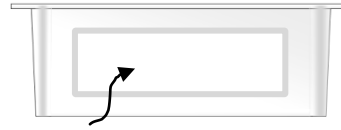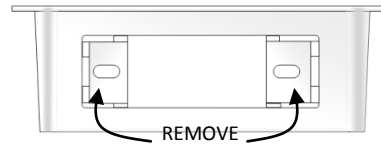

Mounting Sleeve

